




## 5.7 Replacing the HyperHEPA Filter (Filter 3)

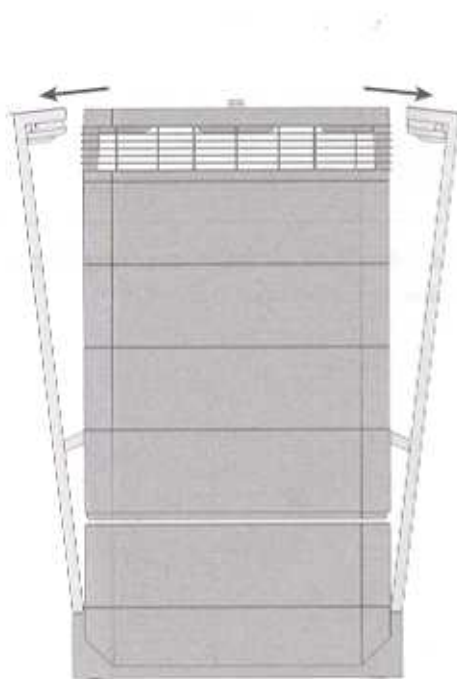


1. Open the locking arms, making sure they are fully extended outwards. (For details, refer to page 5-3.)

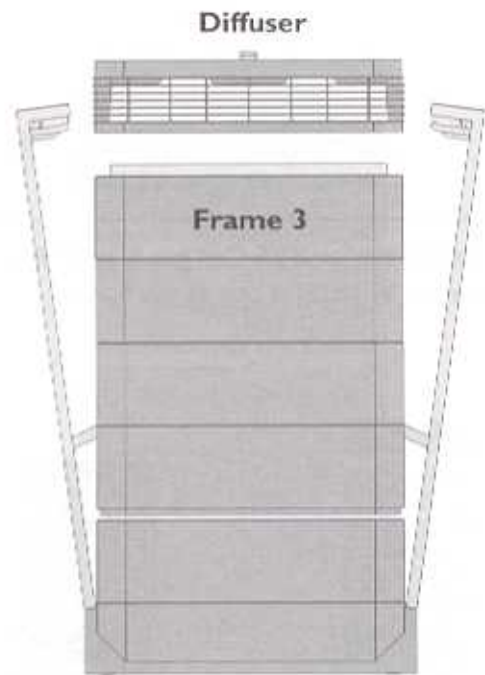


2. Opening the arms will release the top housing modules. Removing the diffuser will reveal the HyperHEPA filter element which is located inside Frame 3.

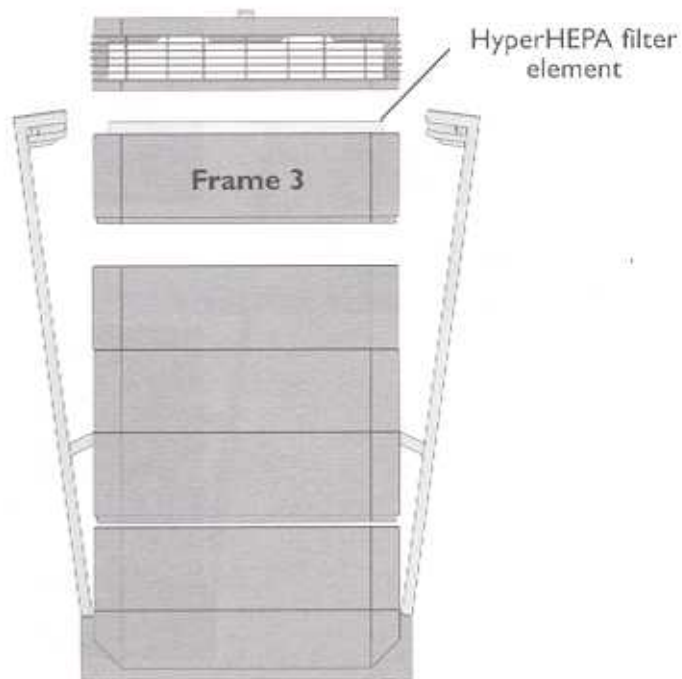


3. Follow the instructions on the next page to replace the HyperHEPA filter element.

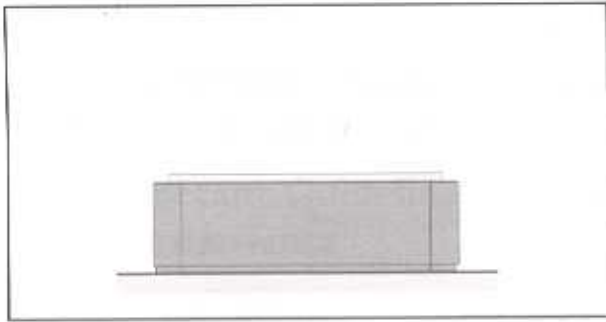


**4.** Place the frame on an even surface.

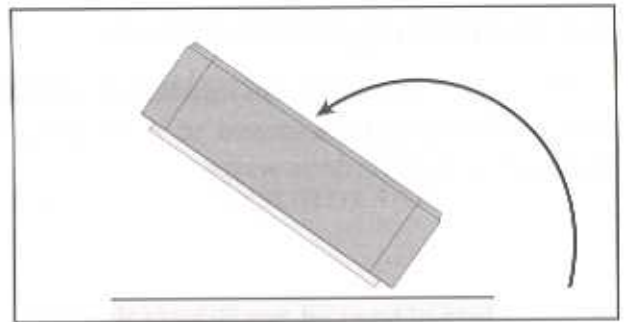


**5.** Turn the frame upside down.

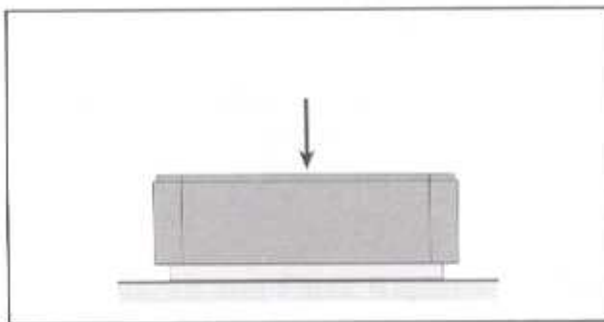


**6.** With the palm of your hand, press down on the filter element and loosen it from the frame.

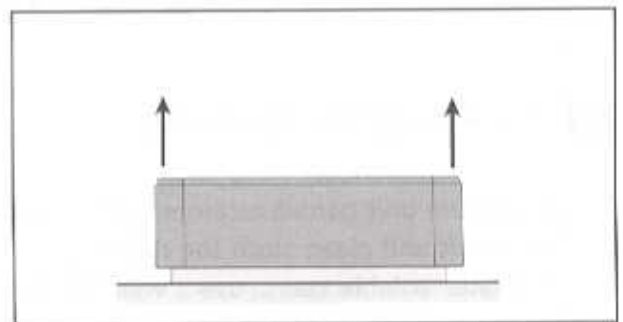


**7.** Lift the frame from the filter element.

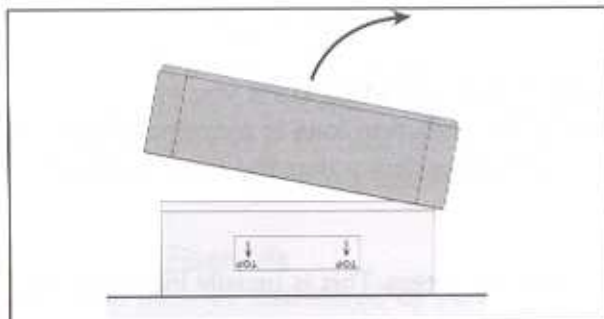


**8.** Dispose of the used filter element by placing it into the plastic bag in which the new filter is supplied.

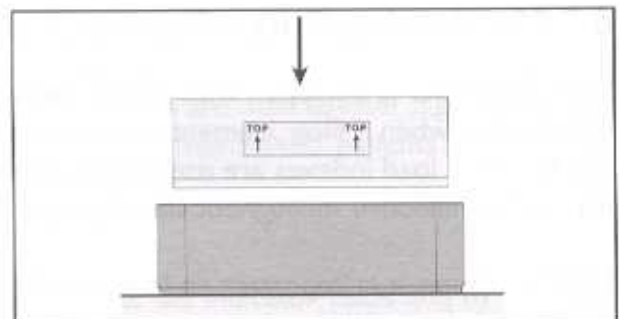

**9.** Turn the frame around and insert the new filter. Ensure that the arrows on the label of the filter element label point upward.

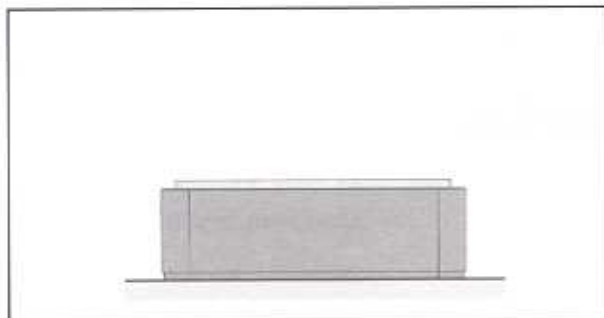

**10.** Make sure that the filter is inserted all the way into the frame.

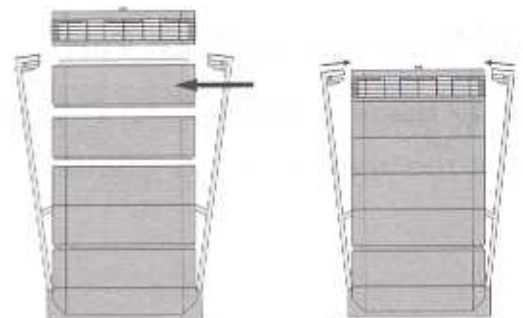

**11.** Put the frame back onto the housing and reposition the diffuser.  
(For details, refer to page 5-5.)