



5.6 Replacing the V5-Cell Gas & Odor Filter (Filter 2)

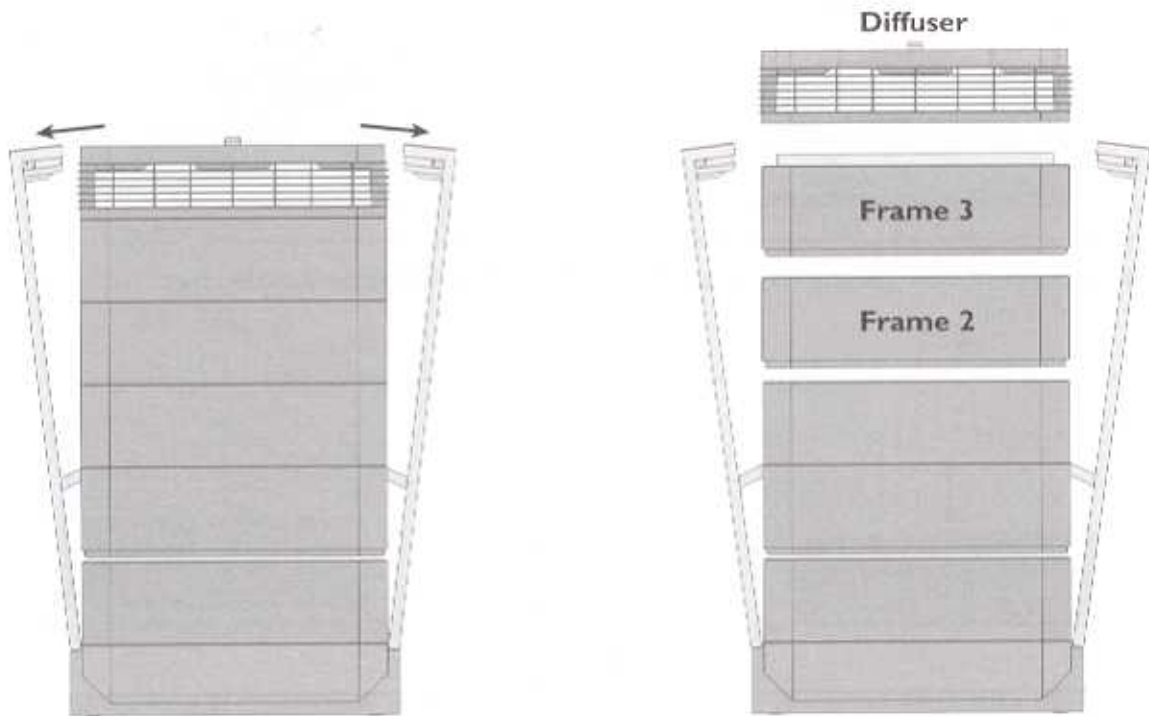


1. Open the locking arms, making sure they are fully extended outwards. (For details, refer to page 5-3.)


2. Opening the arms will release the top housing modules. First, remove the diffuser, then Frame 3 and put these to the side.

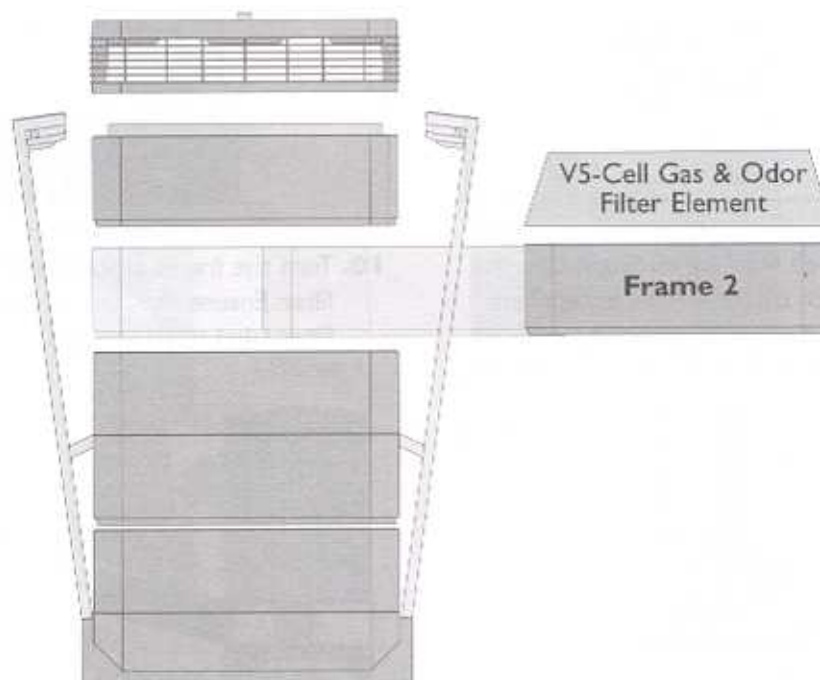


3. Frame 2 contains the activated carbon filter element. Follow the instructions on the next page to replace the V5-Cell gas & odor filter element.

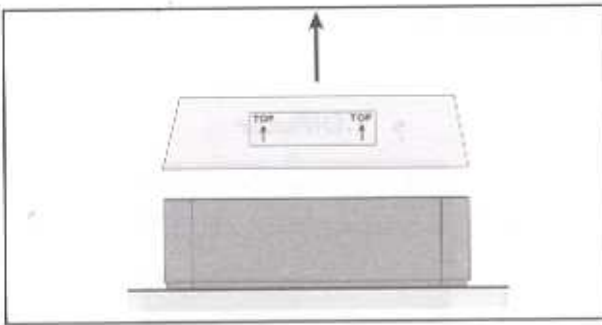

- 4.** Remove the used V5-Cell gas & odor filter element by lifting it out of the frame.

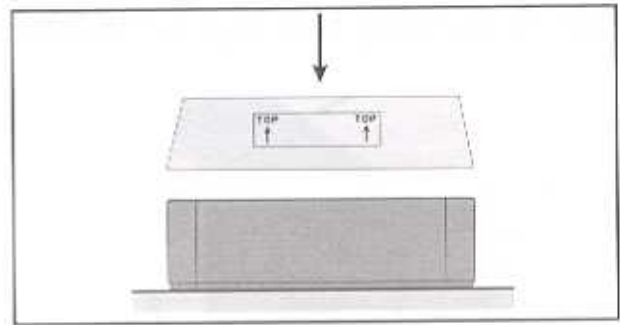

- 5.** Insert the new filter element, ensuring that the correct side is facing up.

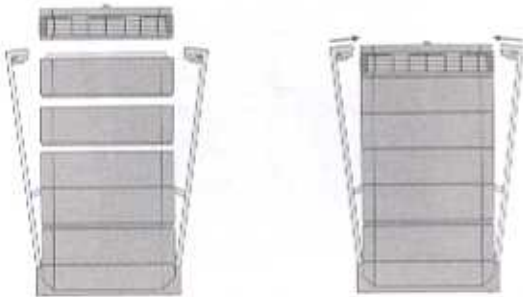

- 6.** Put the frame back onto the housing, followed by frame 3 and the diffuser.
(For details, refer to page 5-5.)